



Established 1906

WT KNOWLES & SONS LIMITED

# Fitting Instructions

## Crowned Gas Terminal

Code No: KNO180C & KNO205C

### W T Knowles & Sons Limited

Ash Grove Pipe Works


Elland

West Yorkshire

HX5 9JA

[www.wtknowles.co.uk](http://www.wtknowles.co.uk)

July 2018: Issue 2

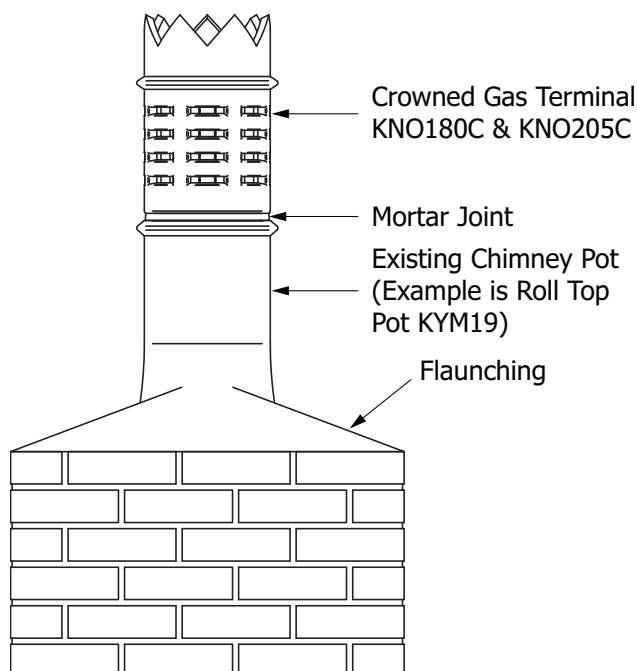

## Instructions

- Inspect existing chimney for cracks and ensure the inside of the chimney pot is clear and free from debris.
- Check that the cement flaunching is sound and the pot is fully secure
- Clean the inside of the top of the pot and the joint face of the pot.
- Inspect the terminal. Confirm it is undamaged and ensure all surfaces are clean and free of debris.
- Ensure the side drainage holes in the top of the crown are clear.
- Mix the mortar with brick coloured dye and apply a bead of mortar to the top of the face of the pot.
- Carefully insert the spigot into the pot and lightly press down onto the mortar joint.
- Align the terminal vertical and trim off excess mortar. Ensure the mortar is smooth and tapered out, to allow rain to run down the outside of the chimney pot.

